



Table of contents

Description	3
Theory of operation	4
Specifications	4
Applications	5
Installation	6
Electronics	6
Maintenance and troubleshooting	10
Service and Repair	12
Warranty	12
Wiring Diagram	12
Ordering information/ Part Number Key	13

CAUTION!

Electrostatic Discharge:

A discharge of static electricity from an ungrounded source, including the human body, may damage the electronic circuitry of the Omniguard[®] Series 660 and 860 Flame Detectors. Use one or more of the following methods when handling or installing electrostatic sensitive parts:

- A wrist strap connected by a ground cord to an earth ground source
- Heel straps, toe straps, or boot straps at standing workstations
- Conductive field service tools
- A portable field service kit with a static-dissipating work mat

Description

The Omniguard[®] 660 and 860 Series Flame Detectors are optically based, self-contained, microprocessor controlled, ultraviolet/infrared (UV/IR) and high-speed ultraviolet (UV) flame detectors. The 860 Flame Detector utilizes the patented Fire Event Analysis (FEA)[™] discrimination technology. These Flame Detectors are compatible with most alarm panels without the need for a controller. All electronics are housed within a copper-free aluminum, high temperature, TGIC-Polyester coated enclosure with a 3/4-14NPT or M20-1.5 conduit entry. A stainless steel enclosure is also available.

The 660 and 860 Series Flame Detectors are suitable for use in Class I, Division 1, Groups B, C and D (explosion-proof) areas and Class II, Division 1, Groups E, F, and G (dust-ignition-proof) areas or $\textcircled{}{}$ II 2 G/D Ex db IIB + H₂.T5 or T4 for gas, Ex tb IIIC T100°C or T135°C Db for dust.

The housings are Type 4X or IP66, dust-tight and watertight. The detectors are approved for both indoor and outdoor installations.

Standard Features (All Models)

- Microprocessor Based.
- User adjustable time delays.
- User adjustable latching or non-latching fire relays.
- User adjustable sensitivity.
- User adjustable NO or NC relay outputs.
- LED indication: fire (red), fault (amber).
- Transient voltage (surge) protection.
- RS485 addressable user interface.
- Terminal block accepts 22 to 12 AWG wire.

Standard Features (Industrial Models)

- 0 to 20 mA output.
- Relay contacts rated at 2 Amps @ 30 VDC (Resistive).
- Operating Temperature: -40°F to 185°F (-40°C to 85°C).
- Storage Temperature: -85°F to 212°F (-65°C to 100°C).

Standard Features (High Temp. Model)

- Relay contacts rated at 4 Amps @ 30 VDC (Resistive).
- Operating Temperature: -40°F to 257°F (-40°C to 125°C).
- Storage Temperature: -85°F to 302°F (-65°C to 150°C).



(Fig 1) 660/860 horizontal field of view

Optional Features (All Models)

• Stainless Steel Housing (explosion-proof).

Approval:

- FM • SIL 2
- SIL 4
- CSA
- Russian Fire Certificate
- IECEx
- ATEX
- EMC
- LVD
- CSFM

Fire Detection Performance (All Models)

- 50 millisecond response to a saturating signal.
- \bullet One second typical to a 1 ft. by 1 ft. gasoline and N-heptane fire at 50 feet.
- \bullet Two seconds or less to a 2 ft. x 2 ft. fire of JP-4, JP-8, Jet A, Jet B, AVTUR or AVGAS at 100 feet.
- Three seconds or less to a 10 ft. x 10 ft. fire of JP-4, JP-8, Jet A, Jet B, AVTUR or AVGAS at 250 feet.
- 120 degree horizontal field-of-view (Figure 1).
- 80 degree vertical field-of-view. (Figure 2).

Fire Detection Performance (Model 860-1XXXX)

- 340 milliseconds or less to a silane flame from a 1.10 inch orifice at 30 feet.
- 2.9 seconds or less to an 8 inch diameter hydrazine fire at 60 feet.
- 3.0 seconds or less to a hydrogen flame from a 0.75 inch diameter orifice with a flow rate of 1.5 SCFM at 35 feet.

Response Time (Model 660 High Speed Setting)

• 15 milliseconds to a saturating UV source.

Note: Detector response times and distances can be influenced by wind, smoke and viewing angle. Consult Firefly AB application engineers for specific details.



(Fig 2) 660/860 vertical field of view

Theory of operation

The Model 860 flame detectors

The Model 860 flame detectors are multi-spectrum detectors, which provide a high degree of discrimination by sensing widely separated flame emission spectra, both of which are found in hydrocarbon and certain specified non-hydrocarbon fires. Sophisticated signal processing is accomplished by microprocessor technology. Automatic self-testing of the electronics, sensors and optical surfaces is accomplished using light guides. The light guides direct radiant energy by a calibrated internal source lamp to the sensors, whereby it can be determined if the detector's windows have been contaminated to the point that would render it blind to fires. This self-interrogation is done a minimum of four times per hour, thus providing the ultimate in fire detection reliability.

The two spectral regions selected for sensing fire signals are the Ultraviolet (UV) and Infrared (IR). The UV sensor is the stable, highly reliable UV photon sensor tube which has a peak response centered around 0.22 microns. The design of the tube is optimized for the highest sensitivity to the UV radiation emitted by a flame with the lowest response to background radiation such as near UV, black light, visible light, sunlight and blackbody radiation, thereby providing a very high signal-to-noise ratio.

The IR sensor is responsive to 4.4 microns. This Spectral frequency is always present in a hydrocarbon fire due to the excitation of hot carbon dioxide molecules.

Additionally the option is available in which the IR sensor is responsive to 2.9 microns as well as 4.4 microns. This option enables the detector to sense certain non-hydrocarbon fires. The detector's autonull feature eliminates interference due to background radiation in these regions of the spectrum.

The Model 860 flame detector not only requires the coexistence of UV and IR radiation, but also their presence in specific ratios. The ratio must conform to the radiation pattern of specific fires (see Figure 3). This patented Fire Event Analysis (FEA) ensures the highest possible discrimination between fire and non-fire sources.

The Model 660 flame detectors

The Model 660 flame detectors are single spectrum detectors utilizing the same ultraviolet sensor tube as described for the Model 860 flame detector.

The Model 660 flame detector requires only that a signal within the detection envelope of the UV sensor will be present in a pre-defined strength for a specified time duration. These parameters are user adjustable and will determine the sensitivity and response time to all fires.

NOTE: Reference Figure 3 for appropriate sensor wavelength regions to be used in Zeta calculation per NFPA 72 edition 2002 or later.

Specifications

Environmental (All Models)

 Suitable for use in hazardous locations: Class I, Division 1, Groups B, C & D Class II, Division 1, Groups E, F & G Type 4X rated.

• European Rating - D II 2 G/D Ex db IIB + H2 T5 Gb for gas (Industrial) Ex tb IIIC T100°C Db IP66 for dust Ex db IIB + H₂ T4 Gb for gas (High-Temp) Ex tb IIIC T135°C Db IP66 for dust

Electrical Interface

• Nominal voltage input —24VDC (20 Min/32 Max).

- Maximum allowable ripple voltage 240mV
- Current Draw (@ 24 VDC):

Model	Standby	Alarm	Manual Test	Auto Test
860/660-XX0XX	90 mA	110 mA	n/a	n/a
860/660-XX1XX	90 mA	110 mA	250 mA	250 mA

Relay Contact rating (860/660 Industrial Models) 2 Amps @ 30 VDC (Resistive)

Relay Contact rating (660 High Temperature Model) 4 Amps @ 30 VDC (Resistive)

Note: Each detector contains two relays: (1) Fire, (1) Fault

- Current Loop Output (0 to 20 mA) Industrial Temperature Models Only (see Table 2)
- RS485 Half-duplex, Addressable, User Interface Baud Rate 9600 bits per second

1 start bit, 8 data bits and 1 stop bit

• Power consumption (@ 24 VDC)

Model	Standby	Alarm	Manual Test	Auto Test
860/660-XX0XX	2.16 W	2.64 W	n/a	n/a
860/660-XX1XX	2.16 W	2.64 W	6 W	6 W



(Fig 3) typical hydrocarbon fire spectrum

Mechanical Specifications

(Figure 3 Shows Nominal Dimensions)

Length:	6,0 inches (153 mm)
Height:	4.5 inches (114 mm)
Width:	5.5 inches (140 mm)
Weights: (installed) Aluminum Housing Stainless Steel	5.0 lbs (2.4 kg) 13 lbs (6.3 kg)
Shipping weight: Aluminum Housing Stainless Steel	6 lbs (2.8 kg) 14 lbs (6.7 kg)

Optional Accessories

Swivel Mount -	No 20856 ⁽¹⁾ (Used with aluminum enclosure) No 70991 ⁽²⁾ (Used with stainless steel enclosure)
Air Shield Kit -	8001023
Rain Shield -	23546

Portable test unit -

Model 540 / 545



(Fig 4) 660/860 mechanical specifications

Applications

The Model 660 and 860 flame detectors are designed for fire detection applications where sudden fires from hydrocarbon fuels or when proper options are selected, from specified non-hydrocarbon fuels, may occur. These detectors are not recommended for smoldering or electrical fire hazards.

The following is a partial list of fuels which emit ultraviolet and infrared radiation. Response time and detection distances vary. Consult Firefly AB applications engineers for specific details:

Hydraulic fluid, Methyl-Ethyl-Ketone, wood products, jet fuels, Methane, Kerosene, Propane, plastics, gasoline, Propylene, Acetone, fuel oil, Acetylene, Methyl alcohol, Ethyl alcohol, Isopropyl alcohol, Heptane, Toluene, Epoxy powders, crude oil, Butane, Hydrogen, Hydrazine, Silane, N-heptane.

The rugged, weatherproof construction and the operating temperature range of the detectors will accommodate a variety of indoor and outdoor applications.

All installations should comply with local fire codes and regulations.

Do not proceed with the installation if you do not understand the installation procedure or operation of the detectors. Firefly AB applications engineers are available to assist you.



(Fig 5) Swivel Mount installation

Installation

To ensure trouble-free operation and reliable fire protection, follow these installation guidelines:

1. Locate the detector(s) in an area where they will have an unobstructed view of the area to be protected and where extraneous sources of ultraviolet radiation will not affect the performance of the fire detectors. These sources include but are not limited to, nuclear radiation, x-rays, electrical corona, unshielded quartz halogen lamps, and open flame sources such as gas fired heating equipment and process burn off stacks. Prolonged exposure to a continuous source of UV radiation will diminish false alarm discrimination. The detectors must be accessible for cleaning. Failure to maintain clean sensor windows, and self-test optics when so equipped, will impair the performance of the detector. For compliance of an ATEX requirement, ensure that there are no hazards in the area that could provide shocks of energy to the windows greater than 2.0 J.

2. Separate the base from the housing by removing the four M8 x 1.25 cap screws. This will require a 6mm hex key. Store the housing assembly, containing the electronics, in a clean and dry environment, while installing the base.

3. Mount the detector base to a previously installed swivel mount or other appropriate support structure so that the detector has an unobstructed view of the area to be protected. Position the base such that the conduit opening faces down. It will be necessary to seal the conduit within 18 inches of the fire detector enclosure. This will insure that water and airborne moisture do not enter the detector housing through the conduit. Provide conduit drains as necessary to prevent moisture from collecting inside the conduit.

4. Determine the critical areas where fires are most likely to occur. Use these areas as focal points for aiming the detectors. The detectors have a conical field-of-vision as shown earlier in Figures 1 and 2. The type of fuel and the size of the fire will determine the range of detection. Aim the detector at a point equal to or below horizontal, so that water, dust and dirt will not accumulate on the optical surfaces of the detector. As a general rule, mount the detector so that it will view the base of the area to be protected.

5. Complete the installation by wiring the detector according to the wiring diagram located inside the rear cover. Before assembling the detector housing to the base, verify that the terminal block assembly is plugged in all the way and is located at the top. Insure that the wires are arranged so as not to interfere with the main electronics module. If a Torque wrench is available, it is recommended that the four cap screws be tightened to a value of 35 to 40 in-lbs. (3.95 to 4.52 NM).

Note: The electronics module contains no re-useable parts. It should never be removed from the housing assembly. This will result in the voiding of the warranty.

6. Use a 20 to 32 Vdc regulated and filtered power supply, with a ripple not exceeding 1 percent. The detectors should be protected from induced and transient voltages as well as radio frequency interference (RFI). To ensure compliance to CE requirements, a dedicated conduit is highly recommended for the detector wiring. Connect every detector housing to earth ground via an independent wire. In order to meet EN 6100-4:1996 Conducted RF Immunity, 150 KHz-100 MHz, 80% AM 1 KHz Pulse, 10 VRMS requires a Corcom filter 15DCB6F or equivalent connected to power lines.

Electronics

User Selectable Factory Settings

The electronic module has been factory configured to provide the user with the following:

Time Delay:	(660/860) 3 Seconds (fire), (860) 35 Seconds (UV or IR warning)
Sensitivity:	(860) Fire Event Analysis Level I, Industrial. (660) Level 2, Normal

Relays: Fire	Normally Open, Latching.
Fault	Normally Open, (Relay is f
	المعالية معالمة معالمه مناهمة المعالمة ما

(Relay is failsafe, it closes upon application of power to detector), non-latching (cleared after successful test).

Optical Self-Test: Automatic (Only Self-Test Models)

(660-0XXXX/860-XXXXX) "OFF" 0 to 20 mA

RS485 (660/860) "OFF" - HI-Z mode



(Fig 6) 660-0xxxx and 860-xxxxx user selectable options locations



(Fig 7) 660-1xxxx user selectable options locations

SPST dip switch (s1) located on board p/n 71043

Option	Off	On
Automatic & Manual Test Activated		1, 2
No Test Feature	1, 2	
Manual Test Only	2	1
Automatic Test Only*	1	2
Industrial Applications*		3
Aircraft Hangar Applications	3	
Fire Event Analysis Level I*		4
Fire Event Analysis Level II	4	
IR/UV Alarm		5

Option	Off	On
No IR/UV Alarm*	5	
Fire Output Latching*		6
Fire Output Non-latching	6	
0 to 20 mA		7
No 0 to 20 mA*	7	
RS485 UI		8
No RS485 UI*	8	
Program		9
No Program*	9	
*Denotes factory settings for auto test units only		

*Denotes factory settings for auto test units only

(Fig 8) switch configurations for the 860-xxxxx UV/IR Flame detector

User Selectable Interface (USI) Options

(Refer to Figures 6 and 7 for Locations of User selectable Options. Figures 8,9 and 10 provide the user with a quick reference of switch setting options for the various models. The text following these figures describes in more detail the function of each switch setting.

Fire Time Delay

Models 660-0XXXX and 860-XXXXX and Model 660- 1XXXX The fire outputs can be configured to delay for up to 25 seconds before annunciation of a fire. If the fire were to extinguish anytime prior to the end of the set delay time, the detector would not declare a fire. The factory setting for this delay time is 3 seconds. To adjust the fire delay time, use Potentiometer (Pot) R49. Turning the Pot counterclockwise (CCW) will decrease the time delay. One turn equals approximately 1.25 seconds.

Note: If the Model 660 is using the high speed option, then the maximum delay time setting will be 400 milliseconds. Each turn of the Pot will equal 20 milliseconds.

SPST dip switch (S1) located on board p/n 71043

Option	Off	On
Automatic & Manual Test Activated		1, 2
No Test Feature	1, 2	
Manual Test Only	2	1
Automatic Test Only*	1	2
Sensitivity — Level 1	3,4	
— Level 2	3	4
— Level 3	4	3
— Level 4		3, 4
Detection Speed — Normal Speed		5
— High Speed	5	
Fire Output Latching*		6
Fire Output Non-latching	6	
0 to 20 mA		7
No 0 to 20 mA*	7	
RS485 UI		8
No RS485 UI*	8	
Program		9

Option	Off	On
No Program*	9	
*Denotes factory settings for auto	test units only	

(Fig 9) switch configurations for the 660-0xxxx UV Flame detector

SPST dip switch (S1) located on board p/n 71044		
Option	Off	On
Automatic & Manual Test Activated		1, 2
No Test Feature	1, 2	
Manual Test Only	2	1
Automatic Test Only*	1	2
Sensitivity — Level 1	3,4	
— Level 2	3	4
— Level 3	4	3
— Level 4		3, 4
Detection Speed — Normal Speed		5
— High Speed	5	
Fire Output Latching*		6
Fire Output Non-latching	6	
RS485 UI		7
No RS485 UI*	7	
Program		8
No Program*	8	
*Denotes factory settings for auto test units only		

(Fig 10) switch configurations for the 660-1xxxx UV Flame detector

UV or IR Warning

---Model 860: Switch position 5 is used to enable the UV or IR Warning Output. If switch position 5 is "ON", this option is activated. If switch position 5 is "OFF", this option is not activated. This option will alert the user to the presence of high levels of either UV or IR within the fieldof-view of the fire detector.

Note: The use of this option will effect the operation of the fault relay only. Refer to the Maintenance and Troubleshooting Chapter (sections labeled "Fault Condition" and "UV or IR Warning") for additional information on switch position 5.

UV or IR Time Delay

— Model 860: The UV or IR outputs can be configured to delay for up to 63 seconds before annunciation of one of these emissions. If the UV or IR signal disappeared prior to the end of the set time delay, then the detector would not allow the outputs to toggle "ON". The factory setting is 35 seconds. To adjust the UV or IR time delay, use Pot R48. Turning the Pot CCW will decrease the time delay. One turn equals approximately five seconds.

Note: Always reset power to the detector after adjusting the pots. The detector will not recognize any new setting unless it is reset.

Sensitivity Levels

—**Model 660 (Table 1):** Switch positions 3 and 4 adjust the sensitivity to four different levels. Level 1 being the most sensitive to UV radiation and the most susceptible to false alarms. Level 2 is the factory setting and is recommended for most applications. The following are the logic levels for the two switch positions:

Table 1 – Model 660 Sensitivity Settings

Sensitivity Level	Position 3	Position 4
1 (Max)	Off	Off
2	Off	On
3	On	Off
4 (Min)	On	On

Detection Speed

—**Model 660:** Switch position 5 is used to select two detection speeds. The normal speed utilizes a slower sampling rate and automatic self-test interval. The high-speed setting increases the data sampling rate and auto self-test frequency. Toggling switch position 5 "ON" activates the normal speed option. Toggling switch position 5 "OFF" activates the high-speed option. The normal speed option is the factory setting and recommended for most applications.

Industrial or Aircraft Hangar Applications

—**Model 860:** Switch position 3 is used to select the application setting. If the detector is to be installed in an industrial environment (i.e., fuel loading rack, compressor building, tank farm), switch position 3 should be "ON". If the application is for an aircraft hangar, switch position 3 should be "OFF". The false alarm immunity will be slightly diminished from that of the industrial setting.

Fire Event Analysis Level I or II

— Model 860: Switch position 4 allows the detector to run the Fire Event Analysis (FEA) program of your choice. FEA Level I is for installations with normal UV background levels (i.e., no welding). FEA Level II should be used where detectors are required to detect flames while welding or other UV generating sources are present. Turning switch 4 "ON" selects FEA Level I. Turning switch 4 "OFF" will provide FEA Level II. Level II has slightly diminished false alarm immunity as compared with Level I.

Relay Adjustments

— Models 660-0XXXX and 860-XXXXX and Model 660-1XXXX There are two relays and Configuration Option Jumpers, JP1 and JP2, located on the exposed surface of the printed circuit board (PCB) in the housing assembly. Using these jumpers, the relays may be configured as normally open or closed. The factory will ship the detectors with the following settings.

1.) Fire relay (K2) — normally open:

-will close when there is a fire present beyond the fire time delay setting.

-will close when manual test is activated beyond the length of time for the fire delay time setting.

Note: The red, light emitting diode (LED), will be illuminated when relay closes.

2.) Fault relay (K1) - normally open:

- will close when power is applied (Model 860 after 2 seconds and Model 660 less then a second).
- will open when power is lost (or fuse F1 on process PCB is open).
- will open when detector fails automatic test.
- will open when detector fails manual test.
- will open when SW7 is on and no loop is present.

Note: The amber LED will be illuminated when relay opens, unless there is a loss of power.

Note: Any adjustments to the user options listed above should be done with the power "OFF". The detectors will not recognize any changes until the microprocessor is reset. Removing the power allows a reset to occur.

Caution: Upon applying power, insure that the detector remains on for at least 5 seconds to allow for complete initialization to take place.

Fire Outputs Latching or Non-Latching

— Models 660 and 860, switch position 6 selects the latching or nonlatching Fire Outputs option. To select latching, the switch position 6 must be toggled "ON". Upon detecting a fire, the Fire Outputs signal will remain engaged as long as power remains "ON" or until the detector is reset through the RS485 User Interface (UI). If you select non-latching by toggling switch position 6 to "OFF", the Fire Outputs signal will disengage after a fire is extinguished.

Optical Self-Test

—**Models 660-XX1XX and 860-XX1XX:** These models have a "throughthe-lens" optical clarity-checking feature. The factory setting is for automatic test only, switch position 1 is "OFF", and switch position 2 is "ON". (See Figure 5 and 6 for location of the switches and Figures 7, 8 and 9 that describe the switch settings for the user selectable interface.) If the addition of the manual test feature is desired, then toggle the switch position 1 to "ON". If only the manual test feature is needed, then toggle the switch position 1 "ON" and switch position 2 "OFF". If no optical testing is preferred, then ensure that both of these switches are "OFF".

Models 660-XXOXX and 860-XXOXX do not have either the manual or the automatic test feature and do not test the lens for optical clarity. Switch positions 1 and 2 are non-applicable (N/A) in these detectors.

0 to 20 mA Output

---Models 660-0XXXX and 860-XXXXX switch position 7 selects the 0 to 20 mA output option. If this output is utilized, then switch position 7 must be "ON". Otherwise, if this output is not used, switch position 7 must be kept "OFF" or it will cause the Fault Outputs to turn "ON". Table 2 illustrates the order of priority. For the Model 660-0XXXX, priority 2 and 3 is N/A.

Table 2 – Milliamp Logic Chart

Priority	State	Load Current mA
1	Fire	20 ± 0.2
2	Warning UV	16 ± 0.2
3	Warning IR	15 ± 0.2
4	Fire Relay Coil Fault	3 ± 0.2
5	Calibration not complete EEPROM Corrupted Fault	2 ± 0.2
6	Self-Test Fault	1 ± 0.2
7	Current Loop Fault	0 ± 0.2
8	Normal	4 ± 0.2

RS485 User Interface (UI)

The Series 660 and 860 Flame Detectors are equipped with a two wire, half-duplex, serial communication interface, which is called the "User Interface" (UI). The RS485 UI will allow up to 31 detectors to be networked to a controller (i.e., customized fire panel or personal computer). The controller will perform the buss arbiter duties, because the network is in half-duplex mode. This means that only one transmitter is allowed on the network at one time.

Activating The RS485 Option

On models 660-0XXXX and 860-XXXXX, switch position 8 enables this option when it is toggled to the "ON" position. It becomes disabled in the "OFF" position. For model 660-1XXXX, switch position 7 performs this task. This option provides the user with a half-duplex serial communication network interface for up to 31 detectors. The RS485 UI has two methods for configuring the network. For either method, the unit has to be programmed to a unique detector number from 01 through 31. The detector number will give the Flame Detector an address on the network. For the first method, the RS485 UI option is "ON". If any alarm state changes, the detector will send out an "Enquiry Interrupt" (EI). The EI is the ASCII character "ENQ", which is equal to the number 5. Once a fire detector starts to transmit the El on the network, it will lock out any other detector from sending out the El. The detector will continue to transmit the El every second until the buss arbiter has requested a status from it. For the second method, when the RS485 UI option is "OFF", the detector will be inhibited from sending the EI. The network is still active, but the detectors will only transmit information or perform a function when the buss arbiter interrogates them. For both methods, the detector will wait for a minimum of 16 ms before it will send a response to the buss arbiter. This delay time allows for the buss arbiter to release the network from its transmit mode.

NOTE: To determine the proper configuration of the RS485 UI refer to the firmware revision block on the nameplate, which is a stamped pad located to the right of the model name. The pad will contain a letter character to indicate the firmware revision level.

The detector provides the RS485 UI with a "Status Message". After a status request is made, the detector will send out for revision "A" a one-byte word that represents the Status Message and starting with revision "B" a six-byte response packet which the fourth byte contains the status message. As shown in Table 3, the status message has seven alarm bits and one valid transmission bit. When bits 0 through 6 are at logic zero, the alarms are "OFF". When bits 0 through 6 are at logic one, the alarms are "ON". Bit 7 is always "ON". For revision "A", it allows for error checking during transmission. If a transmission occurs and bit 7 is not set, then the transmission is not valid. Starting with revision "B", if bits 4 through 7 are set to logic one then the relay coil is open. If bit 3 through 7 are set to logic one then the non-volatile memory has been corrupted.

Table 3 -	Status	Message	for	RS485	UI
Table 5	Julus	message	101	NJ-UJ	01

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Always On	Manual Test Fault	Auto Test IR Fault	Auto Test UV Fault	Milli- amp Fault	IR Warn- ing	UV Warn- ing	Fire

Data commuication RS485

Starting with revision "B", in order for the buss arbiter to interrogate the network, it must send out a six-byte control packet to the network. The packet formation is comprised of the byte definition shown in Table 4. The first byte is the protocol start value for the control packet. The second byte represents the detector address high byte which is the tens digit of the detector address. The third byte represents the detector address low byte, which is the ones digit of the detector address. The fourth byte is the secondary command. This is used to control the detector. The fifth byte is a spare and may be used in the future. The last byte is the checksum of the control packet. This is calculated by first summing the previous five bytes. Then taking the total and performing a modulus 256. The result is the checksum. Table 4 – Control Packet Definition for RS485 UI

Packet Position	ASCII Byte Value			Byte Definition
Byte 1	'K'	75d	4Bh	Protocol Start
Byte 2	'0' to '3'	48d to 51d	30h to 33h	Det. Addr. Hi-Byte
Byte 3	'0' to '9'	48d to 57d	30h to 39h	Det. Addr. Lo-Byte
Byte 4	'0'	48d	30h	No Sec. Command
Byte 4	'T'	84d	54h	Init. Manual Test
Byte 4	'R'	82d	52h	Unit Reset
Byte 5	'0'	48d	30h	Spare
Byte 6	checksum=(Sum bytes 15) mod 256			

If the transmission byte packet is recognized as valid, then the detector will recognize the secondary command byte and perform the function. If the "No Secondary Command" is sent, the detector sends a response packet containing the status message. The packet formation consists of the byte definition shown in Table 5.

Table 5 – Response Packer	Definition 1	for RS485 UI
---------------------------	--------------	--------------

Packet Position	ASCII Byte Value			Byte Definition
Byte 1	'S'	83d	53h	Protocol Start
Byte 2	'0' to '3'	48d to 51d	30h to 33h	Det. Addr. Hi-Byte
Byte 3	'0' to '9'	48d to 57d	30h to 39h	Det. Addr. Lo-Byte
Byte 4	'NA'	128d to 255d	80h to FFh	Status Byte
Byte 4	'0'	48d	30h	Spare
Byte 4	'R'	82d	52h	Unit Reset
Byte 5	'0'	48d	30h	Spare
Byte 6	checksur	n=(Sum byte	es 15) mod	256

To enable the "Manual Test Command", turn switch 1 to the "ON" position. In turn the detector test lamp is illuminated for a period of time based on the customer selected fire time delay. After the fire alarm is activated, the unit transmits the response packet indicating the fire alarm bit set and terminates the manual test. If a fault occurs, then the detector transmits the response packet indicating the manual test fault bit set and terminates manual test. If the "Unit Reset Command" is provided, the unit sends the response packet indicating the present status of the detector and performs a software reset. An initialization period of 2.3 seconds during which the unit is non-responsive to communication occurs after software resets or initial application of power.

Note: All detectors in the network must be programmed to a valid detector address number from 01 through 31. For Revision "A", during the time that detectors are being polled, they will be removed from fire detection mode. Therefore, this should be done only when necessary and as quickly as possible.

Programming the Detector Address Number

on **Models 660-0XXXX and 860-XXXXX**, this option is activated when switch position 9 is toggled "ON". The option is deactivated when the switch is in the "OFF" position. For Model 660-1XXXX, switch position 8 performs this task.

This option provides the user with a method of programming the unit number into the non- volatile memory of the microprocessor. To program the detector address number, first remove power from the detector. Then toggle the program option "ON" and set the first five switches on the user selectable interface (USI) to the detector address number.

In program mode, the USI becomes a binary programmer as illustrated in Table 6. When a switch is toggled "ON", it will equal the binary weighted number. These binary weighted numbers are added together when a multiple number of switches are switched "ON" (i.e., if SW2 and SW3 were closed, then the detector number would equal a 6).

Table 6	Binary	Weight	for	Switch	States '	'ON"

SW1	SW2	SW3	SW4	SW5
1	2	4	8	16

When power is applied to the detector. The detector will sense that it is in program mode and read the first five switch positions. From the switch setting, it will determine the detector number. Once the number has been determined, the detector will enter it into the nonvolatile memory of the microprocessor. Next, the amber LED will flash "ON" a certain number of times. The number of flashes will be equal to the detector's address number. Then it will hold the fault relay and amber LED "ON" constantly for about 10 seconds. Then the detector will repeat flashing the detector address number and the delay time. It will continue this mode for up to 5 minutes.

Once you are sure that the proper number is programmed, then shut the power "OFF" and set the USI options to suit your application. Reference the section on the USI if you are not sure which option is best for your application or call a Firefly AB application engineer.

Note: In the case that the program option switch is left "ON" and the detector is installed on the network. The detector will go through the same process as explained previously, but after 5 minutes the detector will resume the last USI setting that it had prior to going into the program mode.

Maintenance and troubleshooting

Model 660 and 860 flame detectors are designed for years of trouble-free operation with minimal attention. Periodic cleaning of the optical surfaces is essential, however, for maintaining reliable fire protection. The frequency of required cleaning will be determined by the environmental conditions in and around the installation. The detectors should be regularly inspected for a build-up of dust or other contaminants on the optical surfaces.

The detection specifications presented in this manual are predicated on performance with clean sensor windows. Contaminants such as dust, oil and paint will reduce sensitivity. Severe contamination on the light guides or sensor windows will cause a failure of the auto-test. A detector that fails auto-test due to dirty optical surfaces may be capable of detecting fire, but its effectiveness will be limited from 50 to 70% obscuration.

Cleaning Procedure:

Locate the following optical surfaces: (Figure 11)

Models 660-XX1XX

1. UV Sensor Window 2. UV Light Guide End

Model 860-XX1XX

- 1. UV Sensor Window 2. UV Light Guide End
- 3. IR Sensor Window
- 4. IR Light Guide End

Note: Models 660-XX0XX and 860-XX0XX are not equipped with light guides. Clean the optical surfaces with a cotton swab wetted with commercial liquid glass cleaner, ammonia, methanol, or isopropyl alcohol. Rinse with clean water and dry with lens quality cloth. Repeat with methanol if needed to remove smudges.

Caution: Wiping with excessive force or inappropriate materials may scratch the optical surfaces and impair performance.



Figure 11 – Optical surfaces

Troubleshooting:

WARNING Do not attempt to repair a detector. Study these troubleshooting guidelines and review the referenced sections of the manual prior to performing maintenance on the fire detection system.

New Installations:

Starting with Revision E Software, when the detectors are in operational mode, and amber LED will be visible for one second approximately every ten seconds. If any or all the detectors fail to operate, check the system wiring and power supply. Tight, reliable wiring connections are essential, as are low-resistance connections from every detector housing to earth ground. Measure the voltage between terminals 8 and 10 at the detector locations to verify that the supply voltage is within range.

Note: Voltage at detectors installed farthest from power source will be lower than the no-load supply voltage due to line losses. Maximum load condition occurs during manual test.

The Model 660 and 860 flame detectors employ sensitive and sophisticated electronic circuitry in the fire detection process. Power line transients or excessive power supply ripple may therefore cause erratic or intermittent operation. DC-powered detectors function best with ripple-free (less than 1 percent) supply voltage; power supply filtering may be necessary to improve performance.

Note: For reliable operation, the instantaneous supply voltage at the input to any detector must not fall below 20 Vdc or exceed 32 Vdc.

Failure To Alarm:

Upon detection of fire, the fire outputs will activate and the red LED, visible through the UV sensor window, will turn "ON".

If during testing, a detector fails to alarm, inspect the sensor windows for cleanliness. Clean sensor windows are essential for effective optical fire detection. Clean all the optical surfaces per the cleaning procedures previously described and retest the detector.

Should the detector continue to be inoperative, check the supply voltage and all associated wiring. Incorrect power supply voltage or loose connections will cause marginal or intermittent performance.

Alarm Condition - No Fire Present:

A detector in alarm condition when no fire is present may be caused by an inadvertent actuation of the manual test. Except for Models 660-XX0XX and 860-XX0XX, the Model 660 and 860 flame detectors feature manually initiated self-test of the optical and electronic systems.

Verify the light guides are illuminated. If they are, then check the manual test wiring and the test switch for broken, loose, or intermittent connections. Repair or tighten any faulty connections. If the light guides are not illuminated, then contact your Firefly AB representative.

Confidence Condition:

Model 660 and 860 flame detectors are equipped with a fault relay to annunciate a change in the operational status of the detector. When power is applied to the detector, the fault relay will energize within 2 seconds. A loss of power will cause the relay to de-energize.

If the fault relay output fails to change state within 2 seconds after power-up and the amber LED fails to illuminate, then there may be no power reaching the detector's electronic module. Check the supply voltage, the condition of the fuse located at F1 on the PCB and the wiring to terminals 8 and 10. Also, inspect the wiring to the fault relay terminals 6 and 7 and the jumper JP1 that sets the fault relay option.

Note: Model 660-0XXXX and 860-XXXXX flame detectors are equipped with a 0 to 20 mA option. A loss of power will result in a constant 0 mA output.

If the fault relay output continues to be inoperative, isolate the relay contacts by disconnecting the external wiring to the fault relay terminals. Connect an Ohmmeter across the fault relay terminals and monitor for an actuation of the relay. Repair the external wiring if necessary.

Fault Condition:

Model 660-0XXXX and 860-XXXXX flame detectors are equipped with a 0 to 20 mA output. When the 0 to 20 mA option is not used in your application, make sure that the 0 to 20 mA option is "OFF" on the USI. If the 0 to 20 mA option is "ON" and at any time the drive line opens or the current sense does not equate to what is suppose to be there, it will cause the activation of the fault outputs. Check the wire terminal 15 and insure that a good signal ground is present at terminal 10 or 11. To insure that the 0 to 20 mA option causes the fault condition, toggle the option on the USI "OFF" and reset the detector by toggling the power off then on. If the fault condition continues to be activated, then the problem is in a different area.

Model 660-XX1XX and 860-XX1XX flame detectors are equipped with automatic self-test in addition to the manual test. Approximately every 15 minutes the automatic self-test is actuated, and for a brief time interval, the optics and electronics are checked for functionality.

The exception to this is for the high-speed setting on 660 models. In this configuration (switch 5 "OFF"), self-test is actuated approximately every 2 minutes. A failure of the automatic self-test is annunciated by the activation of the Fault Outputs. If a detector goes into a fault condition, the optical surfaces should be checked for cleanliness. Clean sensor windows and light guide ends are necessary for the detector(s) to pass self-test.

After the optical surfaces have been inspected and cleaned, reset the detector. If the detector is wired for manual test, perform the manual test. The typical response time should be from 0.6 seconds beyond the actual fire output time delay.

WARNING During Manual Test, the fire output will be actuated. Always disable extinguishing circuits before testing.

If the detector continues to go into a fault condition following a cleaning of the optical surfaces, check the supply voltage and wiring at terminals 8 or 9 and 10 or 11. Look for loose or intermittent connections. During normal operation, the fault outputs will change state on power-up. The output will return to its original state if power to the detector is removed. If the fault output is intermittent or erratic, check the supply voltage and wiring to terminals 8 or 9 and 10 or 11. Inspect the fault relay wiring on the detectors. Repair or tighten any loose connections.

For the Model 860, if the UV or IR option is "ON", the fault relay will be flashing at a 1 Hz rate whenever a fault conditions exists.

Manual Test Failure:

WARNING This test will activate the fire outputs. Always disable extinguishing circuits before testing.

A manual test is actuated by connecting the 660-XX1XX or 860-XX1XX test circuit terminal 12 to the plus terminal of the detector's input power supply (terminal 8 or 9).

During manual test, the optical and electronic systems of a detector are checked. Upon successful completion of the test, the fire outputs will be activated. Also, the red LED

inside the detector, visible through the UV window, will turn "ON". The typical response time is 0.6 seconds beyond the actual fire output time delay. If the detector fails to respond to a manual test, check to see if the USI manual test option is "ON" (switch 1).

If the detector fails manual test by activating the fault outputs or the response time is longer than expected, the optical surfaces of the detector may require cleaning. Clean the sensor windows and light guide ends. After cleaning, initiate the manual test.

If the detector again fails manual test, check the wiring to the supply voltage terminals 8 or 9 and 10 or 11. The detector may not be receiving enough power; the wiring connections may be loose or intermittent. If the red LED is illuminated and there is no fire output, then check all the connections to the fire alarm panel or annunciating devices. A defective test switch may prevent the test circuit from initializing. Initiate the manual test by connecting a wire from the test switch terminals to the positive terminal of the input power supply. Replace the switch if the manual test operates when the wire is connected.

UV or IR Warning:

In addition to detecting fire, the Model 860 flame detectors will annunciate a warning of potentially hazardous conditions that could cause a fire. For example, welding, a process which emits a far greater proportion of UV radiation than IR, will cause an actuation of the UV or IR Outputs but not the Fire Outputs. For this detector to actuate the Fire Outputs, it must sense the simultaneous presence of UV and IR in a ratio characteristic of the fire type(s) to which the detector is configured.

When the detector senses persistent source of intense UV or IR radiation, such as welding, sparks, or radiant heat, the UV or IR Outputs will change state. To enable the UV or IR Outputs, the UV or IR option (switch 5) must be "ON". When the UV or IR Outputs are activated, it will cause the fault relay to be "OFF" and the amber LED to be "ON" constantly. If the 0 to 20 mA option is "ON", it will set the output to 16 ma. The UV or IR warning are non-latching outputs and will change states if the problem source is removed.

This alarm is used as a tool to help prevent unwanted alarms. An UV or IR warning should always be investigated with caution. If possible, remove the source of radiation, as a constant presence of UV may reduce detector sensitivity and compromise its discrimination ability. Inspect the protected area and beyond; UV from sources such as welding can be sensed at great distances. If no radiation sources are apparent, cover the detector with opaque material to test whether the UV or IR warning disappears when the sensor windows are blocked. Continue searching for the source of UV or IR, if necessary. If the warning does not disappear after blocking the windows, a sensor may be faulty and in need of repair.

RS485 User Interface (UI)

If no communication has been established, check the wiring to be sure that the polarity is not reversed on the two wires. The network can be daisy chained, but it does require two 120 Ω terminating resistors in order to minimize reflections. One resistor should be placed at the controller or buss arbiter. The other resistor should be placed at the farthest location from the controller or buss arbiter. RS485 allows up to 4000 feet of 24 AWG twisted-pair wire driving into 120 Ω loads.

Service and repair

Contact Firefly AB or your Firefly AB distributor for details on our customer support and repair services. Prior to returning defective material, please contact the Firefly AB service and repair department for additional procedural information.

Model 660 and 860 flame detectors are not field-serviceable and the flameproof joints are not intended to be repaired. An unauthorized attempt to repair or re-calibrate a detector will void the warranty.

Detectors should be carefully packed to avoid damage from shock, moisture and dust. Use the original shipping carton, if available. Wrap the detector in plastic before packing. Provide ample packing material to cushion the detector.

Warranty

The warranty period is thirty-six (36) months for the Model 660 and 860 Series Flame Detectors and five (5) years for both the UV and IR Sensors.

Firefly AB will, at its option, repair and return without charge (freight prepaid) any Omniguard product, used in accordance with Firefly AB ratings and instructions and confirmed by Firefly AB to be defective in workmanship or materials. This warranty shall be valid only if the product is returned, within the applicable warranty period, to the factory at Stockholm, Sweden properly packed and with all transportation charges prepaid. All warranty periods commence from the date the product is shipped to the end user, provided that delivery is within six (6) months of the date the product was originally shipped from the factory. There are no warranties of merchantability, fitness, or implied warranties of any kind, or representations for any other Firefly AB product, except the warranty specified herein. In no event shall Firefly AB be liable for any consequential, special or other damages attributable to our product. The buyer is solely responsible for the proper installation, maintenance and use of the Omniguard® flame detectors, and agrees Firefly AB is not in any way liable for any special incidental or consequential damages whatsoever.



3. Fault relay contacts change state on application of power.

Ordering information

To order Model 660, please specify



To order Model 860, please specify

Type: Omniguard [®] model 860	Ordering number: 860 - X X X X X	Designation: Ultraviolet- infrared flame detector
Fire type		 Agency approvals FM, SIL2, CSA, Russian Fire Certificate, IECEx, ATEX, EMC, LVD, CSFM
5 Stainless Steel, M20-1.5 Test feature 0 No self-test 1 Auto self-test		 Fire relay configuration 0 Latching 1 Non-Latching

Notes

Firefly AB Phone: +46 (0)8 449 25 00 Fax: +46 (0)8 449 25 01 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se

Address Heliosgatan 3 120 30 Stockholm Sweden





ULTRAVIOLET FLAME DETECTOR Omniguard[®] model 660

The Omniguard[®] model 660 UV flame detector is designed to detect fires and output appropriate alarm information. The model 660 senses ultraviolet radiation in the appropriate wavelength for extremely fast fire detection. The model 660 will sense both hydrocarbon and non-hydrocarbon fires, a technology which has proven itself over decades of reliable service.

The model 660 is available in two versions, one for standard industrial applications with a maximum operating temperature of 85°C, and a second which is capable of operating at a maximum sustained temperature of 125°C. This version is especially well suited for turbine enclosure and high temperature industrial applications. Both versions come with an automatic self-test function to monitor the detector's ability to sense fires and report a fault condition when impaired. Typical applications, LPG facilities, LNG facilities, hangars and engine test cells.

Specifications

Performance ratings

Responsive to hydrocarbon (gasoline, propane, methane, alcohol, etc.) and non-hydrocarbon (hydrogen, silane, hydrazine, magnesium, etc.) flames.

Third-party performance certified to detect saturating signal source in 15 milliseconds, 1 square foot gasoline flame at 50 feet in 1 second typical. Horizontal field of view 120°.

Environmental ratings

Rated:

Class I, Division 1, Groups B, C & D (explosion proof) Class II, Division 1, Groups E, F & G (dust ignition proof) NEMA Type 4X weatherproof, dust-tight, watertight CE0081 $\textcircled{}{}$ II 2 G/D Ex db IIB + H₂ T5 Gb for gas on 660-0XXXX Ex tb IIIC T100°C Db IP66 for dust on 660-0XXXX Ex db IIB + H₂ T4 Gb for gas on 660-1XXXX Ex tb IIIC T135°C Db IP66 for dust on 660-1XXXX

Housings

Copper-free aluminum conversion coated to MIL-C-5541C, Class 3 (white) Stainless Steel 316 housing with passive finish per MIL-S-5002C, Type 1

Operating temperature

Standard operating temperature range: -40° to +85° C (-40° to 185° F) Special high temperature version: -40° to +125° C (-40° to 257° F)

Operating humidity 0-95% RH (non-condensing)

0-95% RH (non-condensing) (withstands up to 100% RH for short periods)

Specifications continue on next page...





Key features

- Available in special high temperature version, -40° to +125°C (-40° to +257°F)
- b Five-year warranty

 on sensors from date
 of deliver, three-year
 warranty on components
 or manufacturing defects
 from date of delivery
- ง Field of view 120 degrees
- Robust, weatherproof enclosure for indoor or outdoor applications
- In Section 2018 Section 2018
- Advanced through-thelens diagnostic self-test
- ა Long range detection
- Self-contained, explosion- proof enclosure
- 6 Field configurable relays and sensitivity
- State-of-the-art microprocessor control
- b High intensity, localized indication of fire or fault



Specifications (continued)

Spectral response

Ultraviolet peak sensitivity of 0.22 μm

Detector inputs

Inputs

range

standby

alarm

 nominal voltage 24 VDC (ripple voltage <240mV) 20 to 32 VDC

Power consumption

auto and manual test

90 mA 110 mA 250 mA

Detector outputs

Relay

- fire, trouble, dry contacts, hermetically sealed • relays (2)
- fire relay user selectable latching or non-latching
- rated (standard) 2 A at 30 VDC, User selectable NO or NC
- rated (high temp.) 4 A at 30 VDC, User selectable NO or NC

Current loop (standard version) 0 to 20 mA output

- 20 mA = Fire
- 4 mA = Normal
- 3 mA = Fire relay coil fault
- 2 mA = EEPROM corrupted fault
- 1 mA = Self-test fault
- 0 mA = Current loop fault

RS485 User Interface (UI)

Mechanical considerations

Weight	2.4 kg (5 lbs) (aluminum) 6.3 kg (13 lbs) (stainless steel)
Height x width x depth	114 x 140 x 153 mm (4 5 x 5 5 x 6 0 in)
Conduit entry	3/4-14 NPT or M20-1.5
Optional accessories	Art.no
Swivel mount (SS304)	20856 (for aluminum detectors)
Pole mount 2" (SS316L)	26803 (for swivel mount 20856)

Pole mount 2" (SS316L)

Rain shield/ Sun shield (SS316L)

Air shield assembly

Air shield assembly

Portable test unit

23546

8001023 (for standard temp. detectors) 26489 (for high temp. detectors)

26807 (for swivel mount 24784)

43808-2 (115VAC, CSA approved) 43808-3 (100-240VAC, CE approved)

Ordering information

To order, please specify	
Туре	Omniguard® model 660
Designation	Ultraviolet flame detector
Ordering number	660 - X X X X X X
Fire type0 Industrial temperature fire detect1 High temperature fire detector	or
Housing material/conduit entry — 0 aluminum, 3/4-14 NPT (white) 2 stainless steel, 3/4-14 NPT 3 aluminum, M20-1.5 (white) 5 stainless steel, M20-1.5	
Test feature 1 auto self-test	
Fire relay configuration	

1 non-latching

Approvals 0 FM, CSA, IECEx, ATEX, SIL2, Russian Fire Certificate, EMC, LVD, CSFM



For information on the specific certifications and approvals each Omniguard[®] Flame Detector holds please visit: www.omniguardbyfirefly.com/flamedetectors

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se





MULTI-SPECTRUM INFRARED FLAME DETECTOR Omniguard[®] model 760

The Omniguard[®] Model 760 multi-spectrum infrared flame detector is designed to detect fires and output appropriate alarm information. In a breakthrough technological advance, the model 760 senses infrared radiation in five discreet infrared (IR5) wavelengths for early fire detection. The model 760 utilizes the patented Omniguard[®] Fire Event Algorithm (FEA) for superior false alarm immunity.

The multi-spectrum sensor information, combined with the sophisticated algorithm, enables the model 760 the ability to quickly detect hydrocarbon and certain non-hydrocarbon fueled fires. The model 760 also features an automatic self-test function to monitor the detector's ability to sense fires and report a fault condition when impaired. Typical applications for the Omniguard[®] 760 model are refineries, pipelines, production platforms, turbine enclosures, power plants, compressor stations, LNG facilities, LPG facilities, tank farms, hangars, and petrochemical plants.

Specifications

Performance ratings

Responsive to hydrocarbon and non-hydrocarbon flames.

Third-party performance certified to detect: Normal sensitivity

- 1 square foot gasoline fire at 75 feet in <1 second
- 1 square foot n-Heptane fire at 75 feet in <1 second

Enhanced sensitivity

• 1 square foot gasoline fire at 100 feet in <1 second

- 1 square foot n-Heptane fire at 100 feet in <1 second Long distance sensitivity
- 1 square foot gasoline fire at 200 feet in <1 second
- 1 square foot n-Heptane fire at 200 feet in <1 second
- 4 square foot JP-5 fire at 200 feet in <5 seconds

Environmental ratings

Rated:

Class I, Division 1, Groups B, C & D (explosion proof) Class II, Division 1, Groups E, F & G (dust ignition proof) Type 4X weatherproof, dust-tight, watertight CE0081 🐼 II 2 G/D Ex db IIB+H₂ T5 Gb for gas Ex tb IIIC T100°C Db IP66 for dust

Housings

Copper-free aluminum conversion coated to MIL-C-5541C, Class 3 (white) Stainless Steel 316 housing with passive finish per MIL-S-5002C, Type 1

Operating temperature

-40° to +85°C (-40° to +185°F)

Operating humidity

0-95% RH (non-condensing) (withstands up to 100% RH for short periods)

Specifications continue on next page...

© Firefly AB (2022)



Key features

- Patented Fire Event Analysis (FEA) algorithm for superior false-alarm immunity
- Five-year warranty

 on sensors from date
 of delivery, three-year
 warranty on components
 or manufacturing defects
 from date of delivery
- b Field of view 90 degrees
- Nobust, weatherproof enclosure for indoor or outdoor applications
- 6 FM, CSA, IECEx, ATEX, SIL2, Russian Fire Certificate, EMC, LVD, CSFM
- も Advanced through-thelens diagnostic self-test
- ه Long range detection
- Self-contained, explosion-proof enclosure
- ও Field configurable relays and sensitivity
- ら State-of-the-art microprocessor control
- も High intensity, localized indication of fire or fault



Specifications (continued)

Spectral response

Infrared peak sensitivities of 2.2 μm, 2.9 μm, 3.7 μm, 4.4 μm, and 5.8 μm

Detector inputs

Inputs

nominal voltage
range

24 VDC (ripple voltage <240mV) 20 to 30 VDC

Power consumption • standby • alarm

auto and manual test

80 mA 100 mA 160 mA

Detector outputs

Relay

- relays (2) fire, trouble, dry contacts, hermetically sealed
 fire relay user selectable latching or non-latching
- rated 2 A at 30 VDC, User selectable NO or NC
- Current loop: 0 to 20 mA output
- 20 mA = Fire
- 16 mA = Fire IR warning
- 15 mA = Ref IR warning
- 4 mA = Normal
- 3 mA = Fire relay coil fault
- 2.5 mA = Block fault
- 1.5 mA = Exceedance fault
- 1 mA = Self-test fault
- 0 mA = Current loop fault

RS485 MODBUS RTU

Mechanical considerations Weight

Height x width x depth

2,4 kg (5 lbs) (aluminum) 6.3 kg (13 lbs) (stainless steel) 114 x 140 x 125 mm (4.5 x 5.5 x 4.9 in)

Conduit entry

3/4-14 NPT or M20-1.5

Optional accessories Swivel mount (SS304) Pole mount 2" (SS316)

Pole mount 2" (SS316L)

Swivel mount (SS316) Pole mount 2" (SS316L)

Portable test unit

Air shield assembly

Rain shield/Sun shield (SS316L)

Art.no 20856 (for aluminum detectors)

26803 (for swivel mount 20856)

24784 (for stainless steel detectors) 26807 (for swivel mount 24784)

545

19797 27976

2/5/0

Ordering information

To order, please speci	fy
Туре:	Omniguard [®] model 760
Designation:	Multi-spectrum infrared flame detector
Ordering number:	760 - X X X X X X
Fire type 0 Hydrocarbon/non-h	ydrocarbon
Housing material/con 0 aluminum, 3/4-14 N 2 stainless steel, 3/4-1 3 aluminum, M20-1.5 5 stainless steel, M20-	duit entry PT (white) 4 NPT (white) 1.5
Test feature 1 Auto self-test	
Fire relay configuration	n

- 0 latching
- 1 non-latching

Approvals

0 FM, CSA, IECEx, ATEX, SIL2, Russian Fire Certificate, EMC, LVD, CSFM



For information on the specific certifications and approvals each Omniguard[®] Flame Detector holds please visit: www.omniguardbyfirefly.com/flamedetectors

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se





ULTRAVIOLET-INFRARED FLAME DETECTOR Omniguard[®] model 860

The Omniguard[®] model 860 UV/IR flame detector is designed to detect fires and output appropriate alarm information. The model 860 senses ultraviolet radiation and infrared radiation in the appropriate wavelengths for very early fire detection. Using the patented Fire Event Analysis (FEA) algorithm, it is also able to distinguish between real fire and non-fire events providing superior false alarm immunity. The technology has proven itself over decades of reliable service.

The model 860 is available in two versions, one for hydrocarbon fires only, and one for hydrocarbon and certain non-hydrocarbon fires. This dual capability provides the unique ability of providing fire detection for a broad range of fuels with a single unit. Both versions come with an automatic self-test function to monitor the detector's ability to sense fires, and report a fault condition when impaired. Typical applications for the Omniguard® 860 model are refineries, turbine enclosures, petrochemical plants, tank farms, powerplants, compressor stations, LPG facilities, LNG facilities, hangars and paint booths.

Specifications

Performance ratings

Responsive to hydrocarbon (gasoline, propane, methane, alcohol, JP-4, JP-3, etc.). Also responsive to non-hydrocarbon (hydrogen, silane, hydrazine, etc.) flames when special dual-pass IR sensor is used.

Third-party performance certified to detect:

- Saturating signal source in 50 milliseconds
- 1 square foot gasoline fire at 50 feet in 1 second
- 4 square foot aviation fuel fire at 100 feet in 2 seconds or less
- 100 square foot aviation fuel fire at 250 feet in 3 seconds or less
- Methane plume flame 30 inches at 35 feet in 1 second

Additional performance with dual-pass infrared sensor:

- Silane plume flame 24 inches at 35 feet in 600 milliseconds
- Hydrogen plume flame 20 inches at 35 feet in 3 seconds
- Hydrazine 8 inch pool fire at 80 feet in 9.4 seconds

Environmental ratings

Rated:

Class I, Division 1, Groups B, C & D (explosion proof) Class II, Division 1, Groups E, F & G (dust ignition proof) NEMA Type 4X weatherproof, dust-tight, watertight CE0081 $\langle E_X \rangle$ II 2 G/D Ex db IIB + H₂ T5 Gb for gas Ex tb IIIC T100°C Db IP66 for dust

Housings

Copper-free aluminum conversion coated to MIL-C-5541C, Class 3 (white) Stainless Steel 316 housing with passive finish per MIL-S-5002C, Type 1

Operating temperature

-40° to +85°C (-40° to +185°F)

Operating humidity 0-95% RH (non-condensing) (withstands up to 100% RH for short periods)

Specifications continue on next page...

© Firefly AB (2022)



Key features

- A Patented Fire Event Analysis
 (FEA) algorithm for superior
 false-alarm immunity
- Five-year warranty

 on sensors from date
 of delivery, three-year
 warranty on components
 or manufacturing defects
 from date of delivery
- s Field of view 120 degrees
- Robust weatherproof enclosure for indoor or outdoor applications
- 6 FM, CSA, IECEx, ATEX, SIL2, Russian Fire Certificate, EMC, LVD, CSFM
- ง Advanced through-thelens diagnostic self-test
- & Long range detection
- Self-contained, explosion-proof enclosure
- ง Field configurable relays and sensitivity
- State-of-the-art microprocessor control
- も High intensity, localized indication of fire or fault



Specifications (continued)

Spectral response

Ultraviolet peak sensitivities of 0.22 μm

Infrared

- Standard: peak sensitivities of 4.4 μm
- Dual pass: peak sensitivities of 2.9 μm and 4.4 μm

Detector inputs

Inputs

nominal voltage

- range
 - ge 20 to 32 VDC

Power consumption

- standby 90 mA
 alarm 110 mA
- auto and manual test 250 mA

Detector outputs

Relay

- relays (2) fire, trouble, dry contacts, hermetically sealed
- fire relay
 rated
- user selectable latching or non-latching 2 A at 30 VDC, User selectable NO or NC

24 VDC (ripple voltage <240mV)

Current loop: 0 to 20 mA output

- 20 mA = Fire
- 16 mA = Warning UV
- 15 mA = Warning IR
- 4 mA = Normal
- 3 mA = Fire relay coil fault
- 2 mA = EEPROM corrupted fault
- 1 mA = Self-test fault
- 0 mA = Current loop fault

RS485 User Interface (UI)

Mechanical considerations Weight

Height x width x depth

5

6.3 kg (13 lbs) (stainless steel) 114 x 140 x 153 mm (4.5 x 5.5 x 6.0 in)

20856 (for aluminum detectors)

24784 (for stainless steel detectors)

26807 (for swivel mount 24784)

540 (CSA approved)

8001023

23546

26803 (for swivel mount 20856)

2.4 kg (5 lbs) (aluminum)

Conduit entry

3/4-14 NPT or M20-1.5

Art.no

Optional accessories Swivel mount (SS304) Pole mount 2" (SS316L)

Swivel mount (SS316) Pole mount 2" (SS316L)

Portable test unit

Air shield assembly

Rain shield/Sun shield (SS316L)

Ordering information To order, please specify

Туре	Omniguard [®] model 860
Designation	Ultraviolet-infrared flame detector
Ordering number	860 - X X X X X
Fire type 0 Hydrocarbon 1 Hydrocarbon/non-hydroc	carbon
Housing material/conduit 0 aluminum, 3/4-14 NPT (w 2 stainless steel, 3/4-14 NPT 3 aluminum, M20-1.5 (whit 5 stainless steel, M20-1.5	entry hite) Γ e)
Test feature 1 auto self-test	

Fire relay configuration

- 0 latching
- 1 non-latching

Approvals –

0 FM, CSA, IECEx, ATEX, SIL2, Russian Fire Certificate, EMC, LVD, CSFM



For information on the specific certifications and approvals each Omniguard[®] Flame Detector holds please visit: www.omniguardbyfirefly.com/flamedetectors

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se





FLAMMABLE GAS DETECTOR Omniguard[®] model 1100

The Omniguard model 1100 gas detector is designed to detect and measure the presence and level of flammable gases in industrial applications such as Refineries, Drilling and Production platforms, Gas turbines, Chemical plants, Fuel loading facilities, Compressor stations, Waste water treatment facilities, LNG/LPG processing and Storage facilities, Transportation facilities and Manufacturing processes.

The Omniguard model 1100 gas detector is based on well proven sensor technology and has a fast response time, excellent measuring accuracy and long term stability.

The microprocessor controlled functionality and the simple calibration procedure make the Omniguard 1100 gas detector easy to use and to maintain and very reliable in field operation.

The easy to read display and the standard 4-20 mA and HART rev 7 output make installation and operation of the detector quick and easy.

Specifications

General Specifications		
Measuring Type	Diffusion	
Measuring Method	Catalytic cell, Semiconductor cell, Thermal conductivity cell	
Detectable Gases	Flammable gases (LNG, LPG, H ₂ , Methane, Buthane etc)	
Measuring Range	Depending on gas	
Accuracy	$\leq\pm3\%$ / Full range	
Zero Drift	$\leq \pm 2\%$ / Full range	
Response Time	Typical 90% of range in less than 15 sec (dependent on sensor)	
Basic Interface	Analog 4-20mA current interface	
HART Interface	HART rev 7	
Certification	⟨E͡x⟩ II 2 G, Ex db IIC Gb T4, T5, T6 Classified for use in hazardous locations Class I, Division 1, Groups A, B, C and D hazardous locations. UL Certificate of Compliance E506030 SIL2 SGS TÜV Certificate number: FS/71/220/20/0568	
Protection Class	IP66	
Operating Temperature	Transmitter: Sensor:	-40° to +80°C (-40° to +176°F) Dependent on sensor
Operation Humidity	Transmitter: Sensor:	5 to 99% RH (non-condensing) Dependent on sensor
Pressure Range	90 to 110 kPa	
Max Air Velocity	6 m/s	



Key features

- ও Wide range of detectable gases
- b HART rev 7 communication as standard
- Advanced self-test and diagnostics
- も Smart programming and auto calibration
- ง 4-20mA output signal
- ง Easy in field calibration and maintenance
- Robust weather- and flame proof enclosure for indoor or outdoor applications
- ဖ Low cost of ownership
- o ATEX, IECEx, SIL2, CE



Specifications continue on next page...

© Firefly AB (2021)

Specifications (continued)

Electrical Specifications

Input Voltage	18-31 VDC Nominal: 24 VDC Ripple voltage: <1 V
Power Consumption	Max. wattage: 4.8W@+24 VDC Max. current: 200 mA@+24 VDC
Current Loop Measured Value Signal: Fault: HART Fault: Maintenance: 0-100%: 100-109%: Over 110%:	0-20mA (Source or Sink), 500 ohms max load 4mA (Zero) to 20 mA (Full range) 0mA 2mA 3mA 4mA-20mA 20mA-21.4mA 22mA
Current Loop Ripple & Noise Max	±20 μΑ
Wiring Requirement	Power CVVS or CVVSB with shield Analog CVVS or CVVSB with shield
Signal Transmission Distance	Analog: 2500 m (8200 ft)
EMC Protection	Complies with EN50270
Mechanical Specifications	
Material	Housing: Aluminium (ALDC) or Stainless steel (316) Sensor: Stainless steel (316)
Weight	1.5 kg (3.3 lbs) (Aluminum) 3.1 kg (6.8 lbs) (SS)
Dimensions	136 (W) x 166 (H) x 110 (D) mm (5.4 (W) x 6.5 (H) x 4.3 (D)) in
Conduit Entry	3/4-14 NPT or M20x1.5
Mounting Holes	Ø 7 ±0.1 (Ø 0.28 in)
	-)

Optional Accessories (Art.no.)

Rain Cover, Plastic	27727
Rain Cover, SS (304)	28368
Splash Guard	27728
Collecting Cone	27729
Magnet Bar	27730
Pole Mount	28236

Warranty

2 years (Transmitter) / 1 year (Sensor)



© Firefly AB (2021)

Ordering information

Туре:	Omniguard [®] model 1100
Designation:	Flammable gas detector
Ordering number:	1100 - X X X X X X X X
Housing material/conduit entry 0 Aluminium, 3/4-14 NPT (white) 1 Stainless steel, 3/4-14 NPT 2 Aluminium, M20x1.5 (white) 3 Stainless steel, M20x1.5	
Detectable gas 0 CH₄ (Methane) 1 C₄H₁₀ (Buthane) 2 C₃H₃ (Propane) 3 H₂ (Hydrogen) 9 Special gas	
Measuring method 0 Semiconductor cell 1 Thermal conductivity cell 2 Catalytic cell	
Measuring range 0 0-2000 ppm (C4H10) 1 0-100% Vol (H2) 2 0-100% LEL (CH4, C4H10, C3H8, H2) 9 Special range	
Output signal 0 4-20mA, and HART rev 7	
Configuration 0 Standard 1 Remote option	
Approvals 0 ATEX, IECEx, SIL2	



For information on the specific certifications and approvals each Omniguard[®] Gas Detector holds please visit: https://omniguardbyfirefly.com/gasdetectors

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se





OXYGEN & TOXIC GAS DETECTOR Omniguard[®] model 2100

The Omniguard model 2100 gas detector is designed to detect and measure the presence and level of oxygen and toxic gases in industrial applications such as Refineries, Drilling and Production platforms, Gas turbines, Chemical plants, Fuel loading facilities, Compressor stations, Waste water treatment facilities, LNG/LPG processing and Storage facilities, Transportation facilities and Manufacturing processes.

The Omniguard model 2100 gas detector is based on well proven sensor technology and has a fast response time, excellent measuring accuracy and long term stability.

The microprocessor controlled functionality and the simple calibration procedure make the Omniguard 2100 gas detector easy to use and to maintain and very reliable in field operation.

The easy to read display and the standard 4-20 mA and HART rev 7 output make installation and operation of the detector quick and easy.

Specifications

General Specifications		
Measuring Type	Diffusion	
Measuring Method	Electrochemical cell, Semiconductor cell	
Detectable Gases	O2 Toxic gases (CO, Cl2, NH3, H2S etc)	
Measuring Range	Depending on gas	
Accuracy	$\leq \pm 3\%$ / Full range	
Zero Drift	$\leq \pm 2\%$ / Full range	
Response Time	Typical 90% of range in less than 5 sec (dependent on sensor)	
Basic Interface	Analog 4-20mA current interface	
HART Interface	HART rev 7	
Certification	⟨E₂⟩ II 2 G, Ex db IIC Gb T4, T5, T6 Classified for use in hazardous locations Class I, Division 1, Groups A, B, C and D hazardous locations. UL Certificate of Compliance E506030 SIL2 SGS TÜV Certificate number: FS/71/220/20/0567	
Protection Class	IP66	
Operating Temperature	Transmitter: Sensor:	-40° to +80°C (-40° to +176°F) Dependent on sensor
Operation Humidity	Transmitter: Sensor:	5 to 99% RH (non-condensing) Dependent on sensor
Pressure Range	90 to 110 kPa	
Max Air Velocity	6 m/s	



Key features

- ও Wide range of detectable gases
- ら HART rev 7 communication as standard
- Advanced self-test and diagnostics
- も Smart programming and auto calibration
- ง 4-20mA output signal
- ง Easy in field calibration and maintenance
- Robust weather- and flame proof enclosure for indoor or outdoor applications
- ง Low cost of ownership
- ง ATEX, IECEx, SIL2, CE



Specifications continue on next page... © Firefly AB (2021)

Specifications (continued)

Electrical Specifications

=	
Input Voltage	18-31 VDC Nominal: 24 VDC Ripple voltage: <1 V
Power Consumption	Max. wattage: 3.6W@+24 VDC Max. current: 150mA@+24 VDC
Current Loop Measured Value Signal: Fault: HART Fault: Maintenanco:	0-20mA (Source or Sink) 500 ohms max load 4mA (Zero) to 20 mA (Full range) 0mA 2mA
0-100%: 100-109%: Over 110%:	4mA-20mA 20mA-21.4mA 22mA
Current Loop Ripple & Noise Max	±20 μA
Wiring Requirement	Power CVVS or CVVSB with shield Analog CVVS or CVVSB with shield
Signal Transmission Distance	Analog: 2500 m (8200 ft)
EMC Protection	Complies with EN50270
Mechanical Specifications	
Material	Housing: Aluminium (ALDC) or Stainless steel (316) Sensor: Stainless steel (316)
Weight	1.8 kg (4.0 lbs) (Aluminum) 4.0 kg (8.8 lbs) (SS)
Dimensions	136 (W) x 166 (H) x 110 (D) mm (5.4 (W) x 6.5 (H) x 4.3 (D)) in
Conduit Entry	3/4-14 NPT or M20x1.5
Mounting Holes	Ø 7 ±0.1 (Ø 0.28 in)
Optional Accessories (Art.n Rain Cover, Plastic Rain Cover, SS (304)	o.) 27727 28368

Splash Guard 27728 **Collecting Cone** 27729 Magnet Bar 27730 Pole Mount 28236

Warranty

2 years (Transmitter) / 1 year (Sensor)



Ordering information

Туре:	Omniguard [®] model 2100
Designation:	Oxygen & toxic gas detector
Ordering number:	2100 - X X X X X X X X
Housing material/conduit entry 0 Aluminium, 3/4-14 NPT (white) 1 Stainless steel, 3/4-14 NPT 2 Aluminium, M20x1.5 (white) 3 Stainless steel, M20x1.5	
 Detectable gas 0 O₂ (Oxygen) 1 CO (Carbon monoxide) 2 Cl₂ (Chloride) 3 NH₃ (Ammonia) 4 H₂S (Hydrogen Sulfide) 9 Special gas 	
Measuring method 0 Electrochemical cell 1 Semiconductor cell	
Measuring range 0 0-3 ppm (Cl ₂) 1 0-30 ppm (H ₂ S) 2 0-75 ppm (NH ₃) 3 0-150 ppm (CO) 4 0-300 ppm (CO) 5 0-25% Vol (O ₂) 6 0-30% Vol (O ₂) 9 Special range	
Output signal 0 4-20mA, and HART rev 7	
Configuration 0 Standard 1 Remote option	

0 ATEX, IECEx, SIL2



For information on the specific certifications and approvals each Omniguard® Gas Detector holds please visit: https://omniguardbyfirefly.com/gasdetectors

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se



© Firefly AB (2021)



INFRARED GAS DETECTOR Omniguard[®] model 3100

The Omniguard[®] model 3100 gas detector is designed to detect and measure the presence and level of gases in industrial applications such as refineries, drilling and production platforms, gas turbines, chemical plants, fuel loading facilities, compressor stations, waste water treatment facilities, LNG/LPG processing and storage facilities, transportation facilities and manufacturing processes.

The Omniguard® model 3100 gas detector is based on well proven sensor technology and has fast response time, excellent measuring accuracy and long term stability. The microprocessor controlled functionality and the simple calibration procedure makes the Omniguard® 3100 gas detector easy to use and maintain and very reliable in field operation. Easy to read display and standard 4-20 mA and HART rev 7 output makes installation and operation of the detector quick and easy.

Specifications

General specifications		
Measuring type	Diffusion	
Measuring method	Infrared	
Detectable gases	Hydrocarbon gases (LNG, LPG, Methane, Buthane etc) CO_2 , CO, N_2O	
Measuring range	Depending on gas	
Accuracy	$\leq \pm 3\%$ / Full range	
Zero drift	$\leq \pm 2\%$ / Full range	
Response time	Typical 90% of range in less than 10 seconds	
Basic interface	Analog 4-20 mA current interface	
HART interface	HART rev 7	
Relay contact	Alarm1, Alarm 2, Fault relay rated 1.0A@30VDC or 0.5A@125VAC	
Certification	★ II 2 G Ex db IIC Gb T4, T6, SIL2 Classified for use in hazardous locations Class I, Division 1, Groups A, B, C, D hazardous locations. UL Certificate of Complience E506030 SIL2 SGS TÜV Certificate number: FS/71/220/20/0566	
Protection class	IP66	
Operating temperature	Transmitter: Sensor:	-40C° to +80°C (-40F° to +176°F) -40C° to +80°C (-40F° to +176°F)
Operation humidity	Transmitter: Sensor:	5 to 99% RH (non-condensing) 5 to 99% RH (non-condensing)
Pressure range	90 to 110 kPa	
Max air velocity	6 m/s	
Specifications continue on next page		



Key features

- ง Wide range of detectable gases
- も Operation in non oxygen environment
- も HART rev 7 communication as standard
- ง Advanced self-test and diagnostics
- Smart programming and auto calibration
- ა 4-20 mA output signal
- ら Easy in field calibration and maintenance
- b Robust weather- and flame proof enclosure for indoor or outdoor applications
- ి Low cost of ownership
- ง Long service life (>5 years)
- ง IECEx, ATEX, SIL2, CE



©Firefly AB (2022)

Specifications (continued)

Electrical specifications

Input voltage	18 to 31 VDC Nominal: 24 VDC Ripple voltage: <1 V	
Power consumption	Max. wattage: 9.6W@+24 VDC Max. current: 400 mA@+24 VDC	
Current loop Measured value signal: Fault: HART fault: Maintenance: 0-100%: 100-109%: Over 110%:	0-20 mA (source or sink) 500 ohms max load 4 mA (zero) to 20 mA (full range) 0 mA 2 mA 3 mA 4 mA-20 mA 20 mA - 21.6 mA 22 mA	
Current loop ripple & noise max	±20 μA	
Wiring requirement	Power CVVS or CVVSB with shield Analog CVVS or CVVSB with shield	
Signal transmission distance	Analog: 2500 m (8200 ft) RS485: 1000 m (3280 ft)	
EMC protection	Complies with EN50270	
Mechanical considerations		
Housing	Aluminium (ALDC) or Stainless Steel (316) Sensor: Stainless Steel (316)	
Weight	3.2 kg (7.1 lbs) (aluminium) 4.8 kg (10.6 lbs) (stainless steel)	
Dimensions	156 (W) x 322 (H) x 110 (D) mm (6.2 (W) x 12.7 (H) x 4.3 (D)) in	
Conduit entry	3/4-14 NPT or M20-1.5	
Mounting holes	Ø 7 ±0.1 (Ø 0.28 in)	
Optional accessories (Art.no.) Pole mount 28237		
Rain cover, plastic Rain cover, SS (304)	27727 28346	

Magnet bar Warranty

2 years (Transmitter) / 1 year (Sensor)



27730

Ordering information

Туре	Omniguard [®] model 3100
Designation	Infrared gas detector
Ordering number	3100 - X X X X X X X X
Housing material/conduit entry 0 Aluminium, 3/4-14 NPT (white) 1 Stainless Steel, 3/4-14 NPT 2 Aluminium, M20x1.5 (white) 3 Stainless steel, M20x1.5	
Detectable gas 0 CH ₄ (methane) 1 C ₄ H ₁₀ (buthane) 2 C ₃ H ₈ (propane) 3 CO ₂ (carbon dioxide) 4 CO (carbon monoxide) 5 N ₂ O (nitrous oxide) 9 Special gas	
Measuring method 0 Infrared	
$\begin{array}{c} \textbf{Measuring range} \\ 0 \ 0-4000 \ \text{ppm} \ (N_2 O) \\ 1 \ 0-9999 \ \text{ppm} \ (CH_4, \ C_4 H_{10'} \ C_3 H_8) \\ 2 \ 200-4000 \ \text{ppm} \ (N_2 O) \\ 3 \ 0-2\% \ \text{Vol} \ (CO) \\ 4 \ 0-5\% \ \text{Vol} \ (CO_2) \\ 5 \ 0-20\% \ \text{Vol} \ (CO_2) \\ 6 \ 0-100\% \ \text{Vol} \ (CH_4, \ C_4 H_{10'} \ C_3 H_8) \\ 7 \ 0-100\% \ \text{LEL} \ (CH_4, \ C_4 H_{10'} \ C_3 H_8) \\ 9 \ \text{Special range} \end{array}$	
Output signal 0 4-20 mA, and HART rev 7, relays	
Configuration 0 Standard 1 Remote option	
Approvals 0 IECEx, ATEX, SIL2, CE	



For information on the specific certifications and approvals each Omniguard® Gas Detector holds please visit: https://omniguardbyfirefly.com/gasdetectors

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se



©Firefly AB (2022)



SWIVEL MOUNT For flame detector 660, 760, 860





Product data	20856	24784
Detector type	Aluminum 660, 760, 860	Stainless Steel 660, 760, 860
Position	Swivel angle \pm 30°, all directions	Swivel angle \pm 30°, all directions
Connection	9/16-20 UNF-2A	9/16-12 UNC-2A
Weight	0.35 kg (0.77 lbs)	2.71 kg (5.97 lbs)
Materials	Stainless Steel 304	Stainless Steel 316



© Firefly AB (2021)

Swivel mount for flame detector 660, 760, 860



For aluminum detector 660, 760, 860



For Stainless Steel detector 660, 760, 860



Figure 1 Dimension- and assembly drawing for art. 20856



Figure 2 Dimension- and assembly drawing for art. 24784

Firefly AB Stockholm, Sweden Phone: +46 (0)8 449 25 00 E-mail: omniguardsales@firefly.se www.omniguardbyfirefly.se

Omniguard Swivel Mount - Ver 1.0 | EN © Firefly AB (2021)

